

EN Start Here
TC 安裝說明




© 2012 Seiko Epson Corporation. All rights reserved.
Printed in XXXXXX



⚠ Caution; must be followed carefully to avoid bodily injury.
注意：務必遵守注意說明，避免造成人身傷害。


! Important; must be observed to avoid damage to your equipment.
重要事項：務必遵守重要事項說明，避免您的設備受損。

1 Unpacking and Turning On / 清點配件並開機

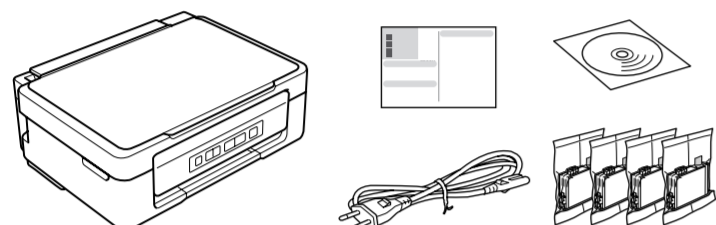


Contents may vary by location.
內容物會因國家/地區而不同。


Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability. 若不安裝至印表機，請勿拆開墨水匣的包裝。為了維持墨水匣列印穩定性，墨水匣採真空包裝。

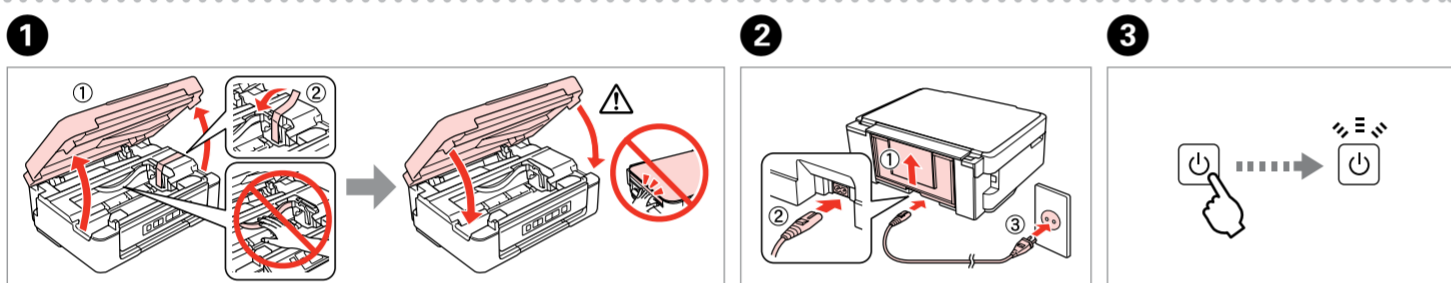

Remove all protective materials.
移除保護膠帶。

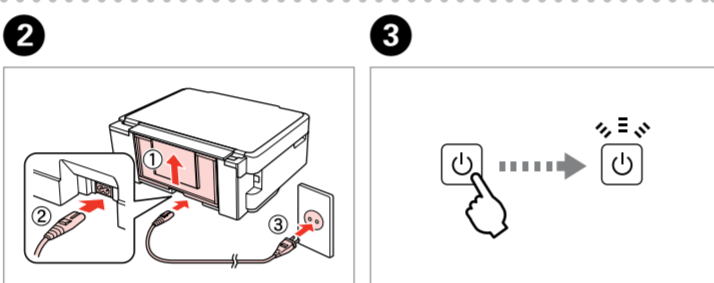


Connect and plug in.
連接電源線並插入電源插座。

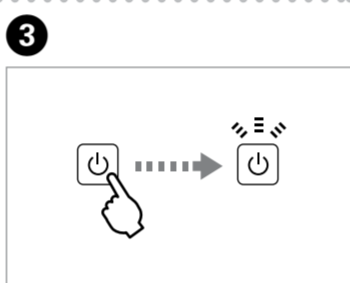


Turn on.
開啓電源。


3 Connecting to the Computer / 將印表機連接至電腦

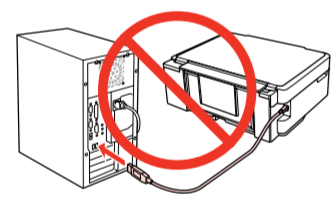


Do not connect the USB cable until you are instructed to do so.
在出現提示前，請勿連接 USB 連接線。

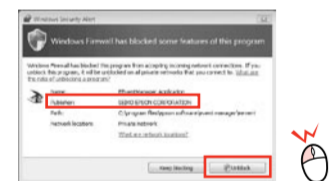


If the Firewall alert appears, allow access for Epson applications.
若出現「防火牆」警示訊息，請確認發行者為 Epson，然後才開啓 Epson 應用程式。

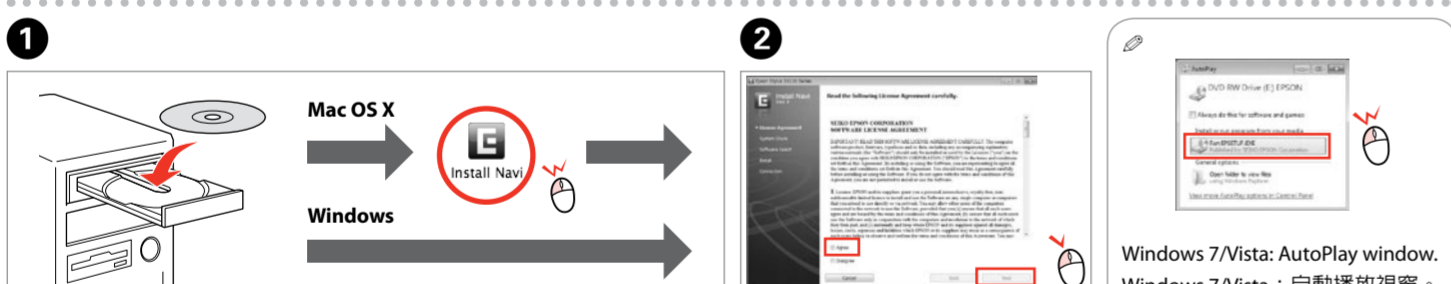


Insert.
放入軟體光碟片。

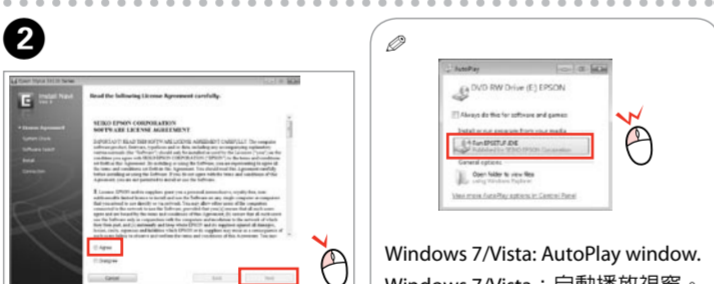

Select.
請選擇項目。

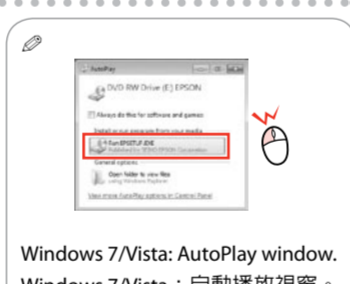

Windows 7/Vista: AutoPlay window.
Windows 7/Vista：自動播放視窗。

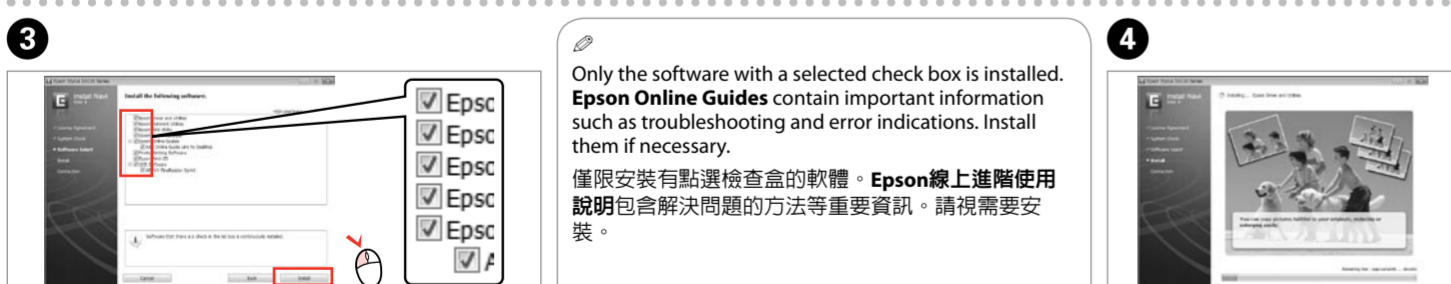

Select.
請選擇項目。

Only the software with a selected check box is installed. **Epson Online Guides** contain important information such as troubleshooting and error indications. Install them if necessary.
僅限安裝有點選檢查盒的軟體。**Epson線上進階使用說明**包含解決問題的方法等重要資訊。請視需要安裝。



View Epson information.
檢視 Epson 資訊。




Select **a** or **b**.
點選 **a** 或 **b**。


To connect via Wi-Fi, make sure that Wi-Fi is enabled on your computer. Follow the on-screen instructions. If the network connection failed, refer to the online Network Guide.
若要透過 Wi-Fi 連線，請確定電腦有啓用 Wi-Fi。請依照螢幕上的指示操作。若網路連線失敗，請參考線上網路使用說明。

2 Installing the Ink Cartridges / 安裝墨水匣

For the initial setup, make sure you use the ink cartridges that came with this printer. These cartridges cannot be saved for later use. The initial ink cartridges will be partly used to charge the print head. These cartridges may print fewer pages compared to subsequent ink cartridges.
在初次安裝時，務必使用本印表機隨附的墨水匣。這些墨水匣無法保存供日後使用。內附的墨水匣，其中有部分墨水會用於印字頭墨水設定上。這些墨水匣的列印張數可能比之後使用的墨水匣少。

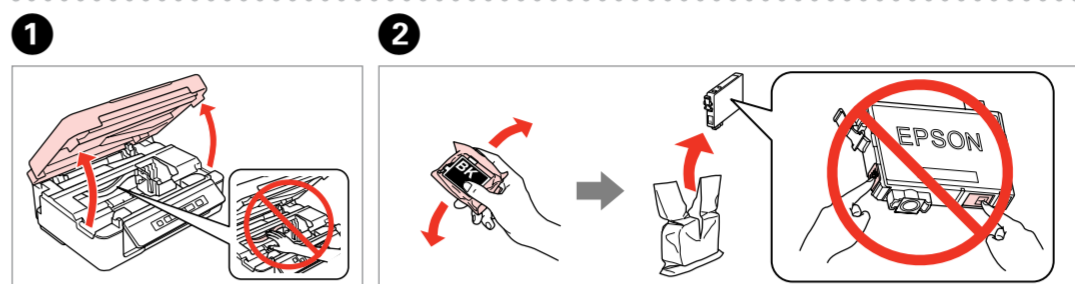


Open.
打開印表機上蓋。

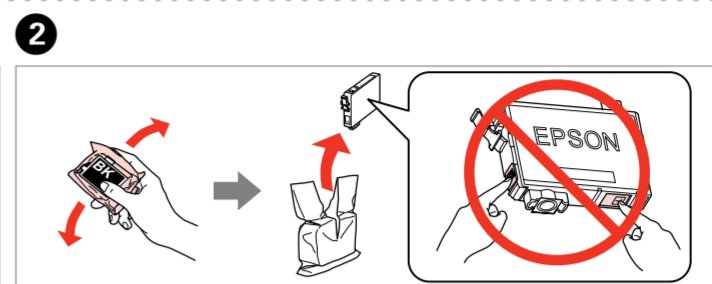


Shake only BLACK new cartridge. Do not shake other color cartridges.
僅搖晃新的黑色墨水匣。請勿搖晃其他彩色墨水匣。


! Be careful not to break the hooks on the side of the ink cartridge.
小心不要弄斷墨水匣旁邊的卡榫。

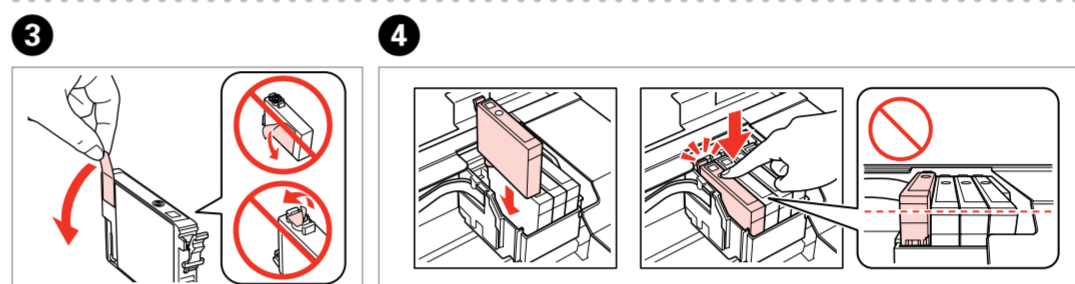


Remove only the yellow tape.
只撕下黃色標籤。

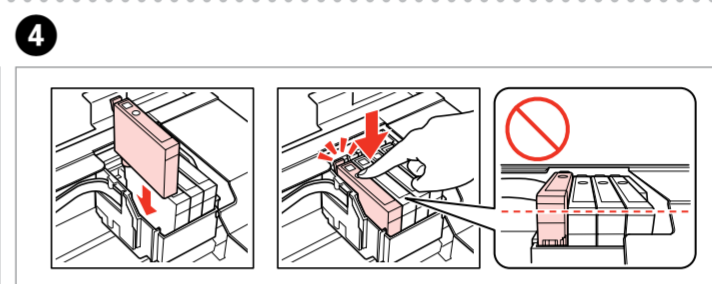


Install the ink cartridges.
安裝墨水匣。

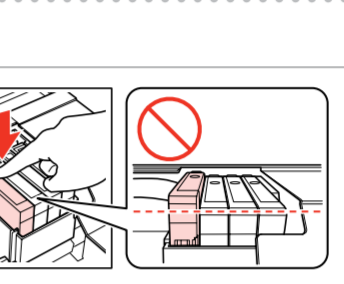


Press down until it clicks.
安裝墨水匣，直到卡入為止。

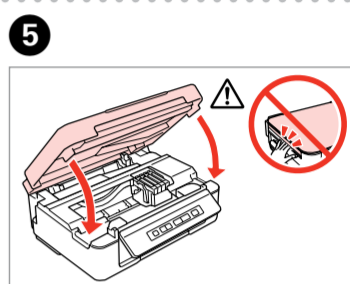

Close.
關上印表機上蓋。

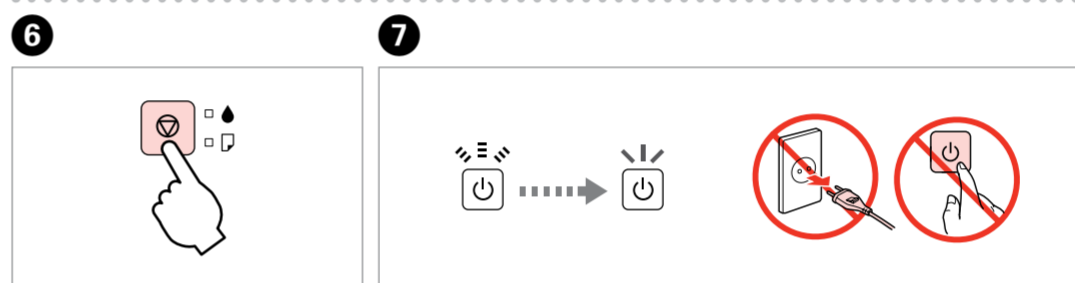

Press. Charging ink is started.
按下按鈕，即開始墨水設定。

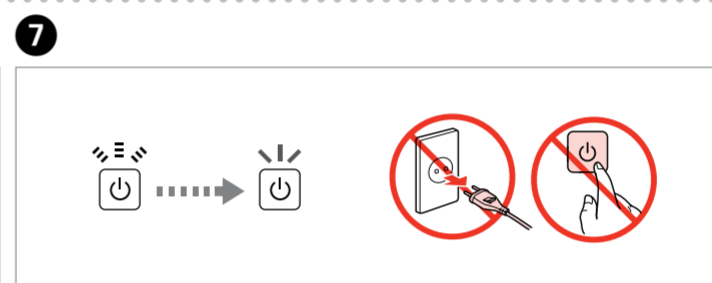

Charging ink takes about 4 minutes. Wait until the light turns on.
墨水設定大約需要 4 分鐘。請等待燈號亮起。

i Getting More Information / 取得更多的資訊



Your printer supports the Epson Connect service. Available services vary by model. Visit the website below to check what services are available for your printer.
您購買的印表機支援 Epson Connect 服務。可用的服務視機型而有不同。請造訪下列網站，查看您印表機可用的服務。





Online Network Guide and User's Guide
線上網路使用說明和進階使用說明



No online manuals? → Insert the CD and select **Epson Online Guides** in the installer screen.
沒有線上使用說明？→ 請放入軟體光碟片，並在安裝畫面中選擇 **Epson線上進階使用說明**。

<https://www.epsonconnect.com/>

Loading Paper and Copying / 放入紙張及複印

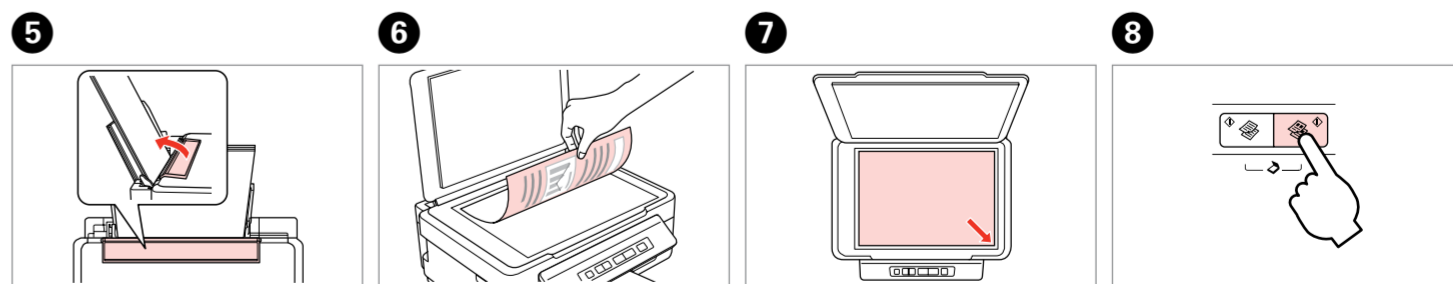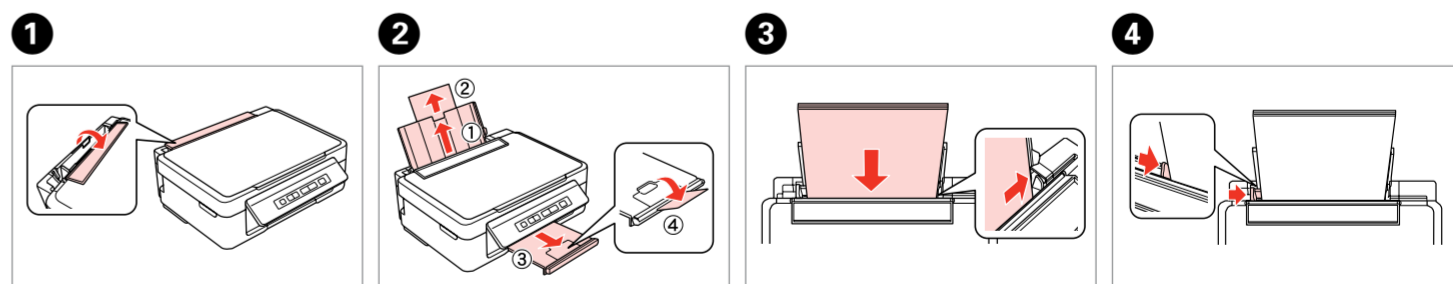


Press **⏏** or **⏏** for 3 seconds to copy in draft mode.
按下 **⏏** 或 **⏏** 三秒會在草稿模式中進行複印。

While pressing **⏏** or **⏏**, press **⏏** within 3 seconds to make 20 copies.
當按下 **⏏** 或 **⏏** 時，在 3 秒內按下 **⏏** 可一次複印 20 份文件。

- Do not load paper above **▼** mark inside the edge guide.
- Load paper with its printable side face up.
- 請勿將紙張裝超過邊緣定位器內側的 **▼** 記號。
- 請將紙張可列印面朝上放入。

Loading Capacity (sheets) for copying
複印紙張容量 (張數)

Plain Paper	11 mm	A4
Bright White Ink Jet Paper	80	

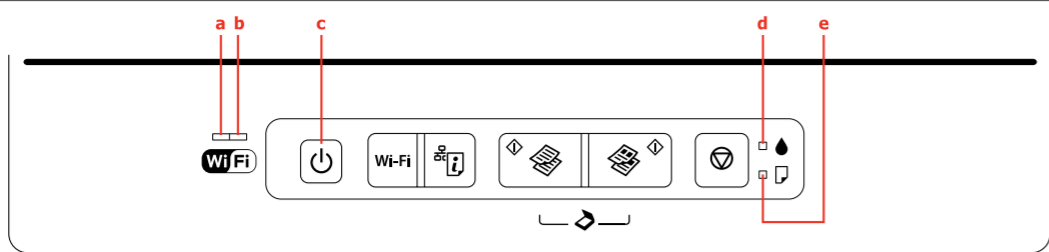

a	b	c	d	e
Network status light (green) 網路狀態燈號 (綠色)	Network status light (orange) 網路狀態燈號 (橘色)	Power light 電源燈號	Ink light 墨水燈號	Paper light 紙張燈號

	Wi-Fi	
Turns the printer on/off. 開啓/關閉印表機電源。	Establishes a Wi-Fi connection when pressed for 3 seconds. 按住 3 秒可建立 Wi-Fi 連線。	Prints a network status sheet. 列印網路狀態表。

Starts monochrome or color copy. Press both buttons simultaneously to scan your original and save it as PDF on your PC. 開始黑白或彩色複印。同時按住兩個按鍵，可掃描原稿並於電腦上儲存為 PDF 檔案。	Stops copying or indicates an expended ink cartridge. 停止複印或表示需要更換的墨水匣。	

Special Operations / 特殊操作

To perform print head cleaning, press for 3 seconds until the power light is flashing. The cleaning uses some ink from all cartridges, so run the cleaning only if quality declines like when you see missing segments on your prints. To replace cartridge(s) that are not expended, open the scanner unit and press for 6 seconds until the print head moves. Then, follow the steps from step ⑤ in the "Replacing Ink Cartridges" section. 若要執行印字頭清潔，請按住 三秒，直到電源燈號閃爍。清潔程序會使用到全部墨水匣中的一些墨水，因此僅在列印成品出現斷線時，再執行清潔程序。若要更換未耗盡的墨水匣，請打開掃描單元並按住 六秒，直到印字頭移動為止，接著依照「更換墨水匣」章節中的步驟 ⑤ 開始操作。	While pressing , turn on the printer to print the nozzle check pattern shown below. 按下 時，開啓印表機可列印噴嘴檢查表單，如下所示。 (a) (a): OK. (b) (b): Needs a head cleaning. (a): 確定。 (b): 需要印字頭清潔。

While pressing , turn on the printer to return the network settings to their defaults. 按下 時，開啓印表機可將網路設定恢復成預設值。	For their special operations, see the "Copying" section. 如需特殊操作資訊，請參考「複印」章節。

: flashing / 閃爍

: on / 亮起

	The paper is jammed in the sheet feeder. Remove the jammed paper from the sheet feeder, load paper correctly, and press or . 自動進紙槽發生夾紙。請從自動進紙槽取出夾紙、正確地放入紙張，然後按下 鍵或 鍵。
	No paper is loaded, or multiple sheets were fed at the same time. Load paper in the sheet feeder correctly and press or . 沒有放入紙張，或自動進紙槽一次讀入太多紙張。請將紙張正確地放入自動進紙槽，並按下 鍵或 鍵。
	Ink cartridge(s) are running low on ink. Printing is still possible. Prepare new ink cartridge(s) or replace the cartridge(s). Only remove the cartridge when you are ready to replace it. Ink cartridge(s) with a low ink level cannot be used even if they are reinserted into the printer. To replace ink cartridge(s) that are running low, open the scanner unit and press for 6 seconds until the print head moves. Next, follow the steps from step ⑤ in "Replacing Ink Cartridges". 墨水存量可能過低，不過仍可繼續列印。請備妥新的墨水匣或更換墨水匣。除非您要更換新的墨水匣，否則切勿取出墨水匣。即便重新安裝至印表機，仍無法使用墨水存量不足的墨水匣。若要更換墨水存量過低的墨水匣，請打開掃描單元並按住 六秒，直到印字頭移動為止，接著依照「更換墨水匣」章節中的步驟 ⑤ 開始操作。
	Ink cartridge(s) are expended, not installed correctly, or invalid. Install the ink cartridge(s) correctly or replace them. If an error still occurs, remove and reinsert the cartridge. 墨水匣需要更換、未正確安裝或無效。請安裝正確的墨水匣或更換墨水匣。若錯誤仍存在，請取出並重新安裝墨水匣。在取得更換的墨水匣前，請將需要更換的墨水匣留置在印表機內，否則印字頭噴嘴的剩餘墨水可能會乾掉。
	Fatal error. Turn the printer off and then back on. If this does not clear the error, turn the printer off and check inside the printer for jammed paper or foreign objects. For instructions on how to remove jammed paper, see the troubleshooting section of the online User's Guide. 嚴重的錯誤。請重新開啓印表機的電源。如果仍未清除此錯誤，請關閉印表機的電源，檢查內部是否出現夾紙或異物。有關移除夾紙的說明，請參考線上進階使用說明的「解決問題的方法」章節。
	The printer's ink pads are nearing or at the end of their service life. Contact Epson Support to replace ink pads. When the printer's ink pads are nearing the end of their service life, you can resume printing by pressing or . 印表機的集墨棉使用壽命即將用盡或已盡，請洽 Epson 授權維修中心進行更換。當印表機的集墨棉使用壽命即將用盡時，可按下 或 繼續列印。
	An error occurred while establishing the Wi-Fi connection. Press Wi-Fi to clear the error and try again. For more details, see the online Network Guide. 建立 Wi-Fi 連線時發生錯誤。請按下 Wi-Fi 清除錯誤並重新嘗試。如需詳細資訊，請參考線上網路使用說明。
	The firmware update has failed. You will need to re-attempt the firmware update. Ready a USB cable and visit your local Epson website for further instructions. 韌體更新失敗。您必須重新嘗試執行韌體更新。請備妥 USB 線並瀏覽當地的 Epson 網站，以取得詳細說明。

Replacing Ink Cartridges / 更換墨水匣


- Open.
打開印表機上蓋。
- Press.
按下。
- Check which cartridge is expended.
檢查哪一個墨水匣已需要更換。
- Press to check other expended cartridges.
按下 可檢查其他需要更換的墨水匣。
- Shake only BLACK new cartridge. Do not shake other color cartridges.
僅搖晃新的黑色墨水匣。請勿搖晃其他彩色墨水匣。
- Remove only the yellow tape.
只撕下黃色標籤。
- Pinch and remove.
用兩指夾起墨水匣。
- Install the ink cartridges.
安裝墨水匣。
- Press down until it clicks.
安裝墨水匣，直到卡入為止。
- Press. Charging ink is started.
按下按鍵，即開始墨水設定。
- Charging ink takes about 1.5 minutes. Wait until the light turns on.
墨水設定大約需要 1.5 分鐘。請等待燈號亮起。

Safety Instructions / 安全說明

Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment. 僅限使用印表機隨附的電源線。使用其他電源線可能導致起火或觸電。請勿使用其他設備的電源線。	Place the printer near a wall outlet where the power cord can be easily unplugged. 將印表機放置在容易拔出電源線的電源插座附近。	Use only the type of power source indicated on the printer. 僅限使用印表機所示的電源類型。	Make sure the power cord meets all relevant local safety standards. 確定電源線有符合當地的安全標準。	Do not let the power cord become damaged or frayed. 請勿使用損壞或磨損的電源線。
Keep the printer away from direct sunlight or strong light. 請勿讓印表機接近受陽光直射或強烈光線照射的地方。	Do not open the scanner unit while copying, printing, or scanning. 複印、列印或掃描時，請勿打開印表機單元。	Do not use aerosol products that contain flammable gases inside or around the printer. Doing so may cause fire. 千萬不要在本產品的內部或周圍使用具有易燃氣體的噴霧劑產品，這可能會引起火災。	Except as specifically explained in your documentation, do not attempt to service the printer yourself. 除非是文件中有特別說明之處，否則請勿企圖自行維修本產品。	
Keep ink cartridges out of the reach of children. 請將墨水匣放在兒童無法取得之處。	Do not shake the ink cartridges too vigorously; otherwise ink may leak from the cartridge. 請勿劇烈搖晃墨水匣，否則墨水可能會滲出。	If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Do not touch the ink supply port or surrounding area. 若為了日後使用而取出墨水匣，請妥善保護墨水區域以免沾染灰塵，並將其存放在與本產品相同的環境中。請勿觸碰墨水孔或其周圍區域。	If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. If ink gets into your mouth, spit it out immediately and see a doctor right away. 若墨水碰到皮膚，請用肥皂及清水徹底洗淨。若墨水噴到眼睛，請立刻用清水沖洗。若徹底沖洗過後仍感到不適或對視造成影響，請馬上就醫。若墨水進入口中，請立即吐出並就醫。	

Information for Users in Taiwan Only / 資訊僅適用於台灣使用者

<p>產品名稱：多功能印表機</p> <p>□ 額定電壓：AC100 - 240V</p> <p>□ 額定頻率：50 - 60 Hz</p> <p>□ 耗電量：單機複印時，約 12W 就緒模式，約 5.0 W 省電模式，約 2.7 W 關機模式，約 0.3 W</p> <p>□ 額定電流：0.5 - 0.3A</p> <p>警語 檢修本產品之前，請先拔掉本產品的電源線。</p> <p>功能規格 □ 列印方式：微針點壓電噴墨技術 □ 解析度：最大可達 5760 x 1440 dpi □ 適用系統：Windows 7/Vista/XP SPI 以上版本 / XP x64、Mac OS X 10.5.8, 10.6.x, 10.7.x</p>	<p>使用方法 見內附相關說明文件。</p> <p>緊急處理方法 發生下列狀況時，請先拔下印表機的電源線並洽詢 Epson 授權服務中心： □ 電源線或插頭損壞 □ 有液體噴灑到印表機 □ 印表機掉落或機殼損壞 □ 印表機無法正常操作或是列印品質與原來有明顯落差</p> <p>注意事項 □ 只能使用印表機標籤上所註明的電源規格。 □ 請保持工作場所的通風良好。</p>	<p>製造年份、製造號碼和生產國別： 見機體標示</p> <p>製造商：Seiko Epson Corporation 地址：80 Harashinden, Hirooka, Shiojiri-shi, Nagano-ken, 399-0785, JAPAN 電話：81-263-52-2552</p> <p>進口商：台灣愛普生科技股份有限公司 地址：台北市信義區松仁路 7 號 14 樓 電話：(02) 8786-6688 (代表號)</p>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

 

Cartridge Codes
墨水匣代碼 176/177